

796356



Label for release push button - Esser, German/English



Red, with "AUSLÖSUNG FEUERSCHUTZTÜR / RELEASE FIRE DOOR ESSER" - for release key 767813 and 767814.



10 pcs

1

2

3

4

5

6

7

8

9

10

11

12

13

14